 


*Nightlight*

USER MANUAL AND WARRANTY


# Watch components

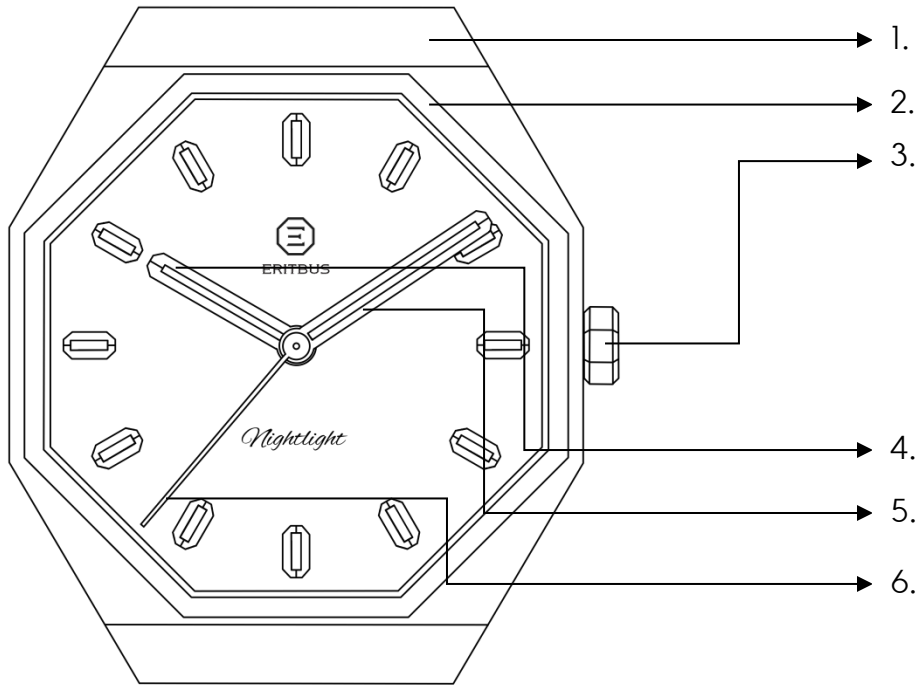

 
1. Case
2. Bezel
3. Crown
4. Hour Hand
5. Minute Hand
6. Second Hand

# Time Adjustment


1. Pull the crown horizontally for the time function to stop.

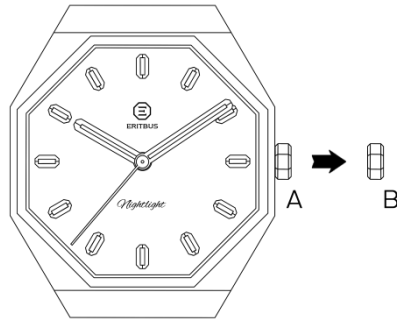

 2. Adjust the crown to the preferred time.

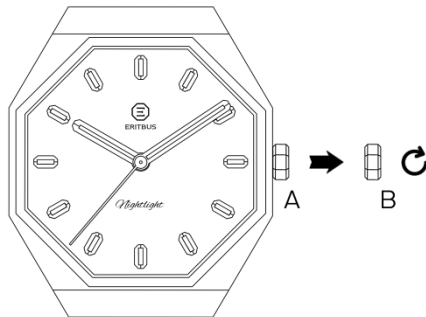

 3. Push the crown horizontally for the time function to start.

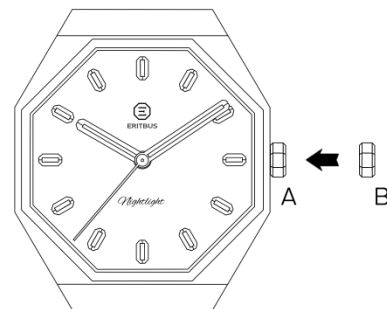

# Warranty

Eritbus offers customers a warranty limited to 24 months from the date of purchase. The warranty can be used in case the product purchased will present any defects in material or craftsmanship which will prevent the product from functioning under normal conditions of use.

The warranty does not cover batteries, straps, or cosmetic issues. Cosmetic issues are defined as scratches or normal wear and tear. In addition, the warranty does not cover any type of damage or defects raised from a repair being conducted by a service centre not authorised by Eritbus. In case the product is not purchased through an Eritbus Official Channel, the warranty is declared void.